


phone Plus

telephone handset amplifier

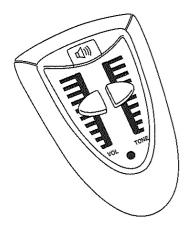

Operating Instructions

Introduction

The phone plus telephone handset amplifier will benefit anyone who finds telephone caller's voices quiet or muffled.

The phone Plus is discreet, stylish and easy to use.

Simply connect the phone Plus between the base unit and handset of your corded telephone for significantly enhanced sound quality.

Callers voices can be amplified by up to 40 dB (100 times) with additional tone control of +/- 6 dB helping to improve clarity.

Adjust the volume and tone controls to your personal needs, making conversations loud and clear.

Anyone can use the telephone with the phone Plus connected, setting the phone Plus to minimum returns the

Ensure that mains powered equipment is disconnected before any connections are made to the phone Plus.

Do not expose the phone Plus to rain or any other forms of moisture.

Do not place the phone plus close to sources of heat, such as radiators.

Only AA type batteries can be used, the type which are supplied are alkaline, rechargeable and normal batteries can be used but we recommend alkaline.

Do not mix old and new batteries.


Do not dispose of batteries in a fire as they may explode.

Do not open or mutilate the batteries, and do not short the batteries with conductive materials such as coins or rings, as this may cause the batteries to overheat.


If you are using rechargeable batteries, please only charge them in accordance with the instructions supplied with the batteries and charger.

It is advisable to remove the batteries if the phone Plus will not be in use for a long period of time.

Product Overview

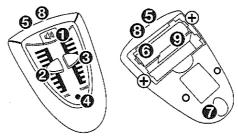

- 1 Boost button
- 2 Volume control
- 3 Tone control
- 4 LED indicator
- 5 Headset/Neckloop socket
- 6 Battery compartment
- 7 Handset connection socket



(as shown) before operation.

batteries (supplied).

new batteries.

:TNATRO9MI


These batteries will need to be fitted

The phone Plus is powered by 2 AA

cord from the wall prior to fitting Always disconnect the telephone

Ashdset wiring module

du gnittae



to two years. technology the batteries may last up eupsuced power management batteries (supplied) and through The phone Plus operates on 2 AA

integrated keypads. handsets with and mobile phones or be used with cordless The phone plus cannot

Precautions


DNINFIAW

very high. from the phone plus can be The sound output levels


extra amplification. user who does not require prevent hearing damage to a zero after each use, this will volume control is returned to It is recommended that the

compliance with the safety precautions. caused by not using the phone plus in responsible for damage which is The manufacturer cannot be held

can be found inside. or the HWM. No user serviceable parts phone plus except to change batteries Do not open the casing of the

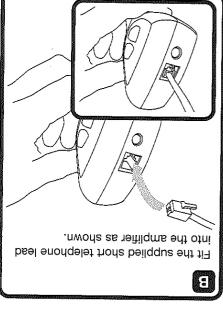

connecting lead (as shown). telephone base using the short LED Indicator

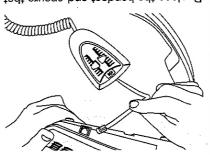

in the middle (normal) setting. is set to zero and the tone control is the volume control on the phone plus Replace the handset and ensure that

to suit your requirements). volume control can now be adjusted listen for the dialling tone (the Pick up the telephone handset and

instructions for use. successfully. Continue with installation has been carried out the green LED is illuminated the It the dial tone can be heard and

configured to suit your phone. you, the phone plus will need to be person at the other end can not hear

If you can not hear a dial tone or the

The phone Plus comes configured in

you and the letter A will be visible. narrow end of the phone PULS towards

position A. To check this hold the

B, C or D. Replace the batteries. it in one of the 3 remaining configurations batteries. Remove the HWM and re-seat To change configuration first remove the

and without force. that the battery cover can close easily Ensure HWM is seated in position so

every time the telephone handset is lifted, The phone Plus turns on automatically

guitenimulli this is indicated by the green LED

the green LED no longer being lit. onto the cradle, this will be indicated by after the telephone handset is replaced automatically approximately 30 seconds The phone Plus will switch off

the position of the volume control. of betaler function not related to Please note that switching the unit on and

normal providing the volume control is flat the telephone will still function as If the battery in the phone Plus is low or

returned to the minimum setting.

the batteries are exhausted. minimum will give reduced output, when to lorino emulov ent gnimuter to M

Troubleshooting

- telephone handset is lifted. Q. Green LED does not illuminate when the
- connections. A. Replace batteries and/or check all
- Q. No amplification evident.
- and should be returned. the phone plus has developed a fault unit, if the telephone works as normal handset directly into the telephone base telephone base unit and plug the A Disconnect the phone Plus from the


provisions of the R&TTE directive 1999/5/EC. essential requirements and other relevant telephone amplifier is in compliance with the Hereby, Sarabec Ltd declares that the PL51

> of Conformity EU Declaration

Middlesbrough TS2 1RH. Sarabec Ltd, 15 High Force Road, PL51 telephone amplifier is available from The full declaration of conformance for the




Unplug the handset cord from the base of your telephone, (do this by locating the socket at the end of the handset cord, there will be a small tab, this should be pressed towards the body of the plug using the small screwdriver provided, then pull the cord and the plug should pull free).

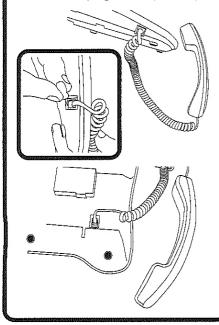



Now insert the disconnected lead into the socket situated at the front (narrow end) of the phone plus unit (as shown).

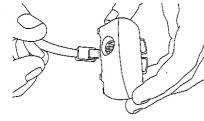




Connect the phone Plus to the



To remove the HWM simply hold it and pull straight up from the amplifier unit, to reseat the HWM simply push the HWM into the slot in the battery compartment



Instructions for use

Headset/Neckloop socket

Use the telephone handset as normal to speak into, but you can listen through a headset or neckloop plugged into this socket.

Volume control

Adjust the volume to the setting which is most comfortable by moving the volume control slide switch.

™ Tone control

Adjust the tone control slide switch up or down to a position which allows you to hear clearly, the normal tone can be found at the middle point on the tone control slide

When the control is moved up the higher frequencies will be boosted and if the control is moved down lower frequencies will be boosted.

Boost control

Press and hold down the boost button for further amplification, the boost function doubles the output at the chosen volume setting.

When using the boost function background noise and the possibility of feedback occurring will be greatly reduced as this function mutes the microphone in your handset.

When speaking, remember to release the boost button so that the person you are speaking to can hear you at their normal volume level.